

56108 ACURA ZDX

WIRING LOCATION GUIDE GUÍA DE UBICACIÓN DEL CABLEADO IDE D'EMPLACEMENT DES FILS



MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.

¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filéée.

1/30/2011

English

1. Open the hatch. Remove the storage compartment cover by lifting up (A), disconnecting the struts (B) and removing the two phillips head screws on each side. Remove the scuff panel by removing a cargo loop on each side of the vehicle (C) and pulling up on the scuff panel (D). Remove the rear storage compartment floor covering by removing plastic fasteners holding it in place. On the passenger side of the vehicle remove the trim panel by removing the plastic covers (E) and then the phillips head screws holding it in place (F).

2. Behind the rear trim panel locate the vehicles trailer wiring harness connector. The connector will mate with the one on the trailer harness. Insert the harness connector into the vehicle's connector (G). Make sure the connectors are fully inserted with locking tabs in place.

4. Locate the existing ground near the connector (H). Remove the 10mm bolt and place the ring terminal on the ground bolt. Reinstall the ground bolt.


5. Adhere the black converter box to the frame of the vehicle using the double-sided tape provided.

6. Route the 4-flat wire behind the trim panel to the rear of the vehicle. Route the 4-Flat out from under the trim panel into the storage compartment for storage when not in use. When in use route the 4-flat out of the hatch.

9. Reinstall all items removed during install.

10. Locate the vehicle's fuse panel under the hood, on the passenger side. Insert the (2) 7.5 AMP fuses into positions 9 and 11 as shown (I). The positions are labeled "Trailer Small" and "Trailer Turn/Stop" on the fuse panel cover.

INSTALLATION QUESTIONS? CALL TECHNICAL SUPPORT AT 1-877-287-8634

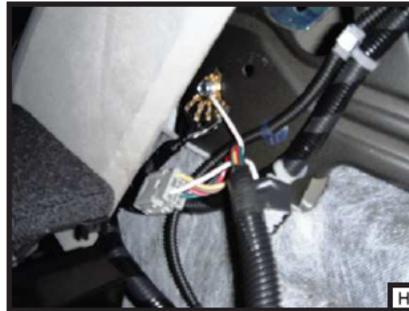



56108