



INSTALLATION INSTRUCTIONS
FRONT BAR PART 9042
1999 1/2 to 2004 NISSAN PATHFINDER

PARTS LIST


- 1- FRONT BAR
- 2- BOTTOM FRAMES MOUNTING BRACKETS
- 1- SUPPORT BRACKET
- 2- 1/4 X 3/4 SCREWS
- 2- 1/4 HEX NUTS
- 12- 7/16 FLAT WASHERS
- 6- 7/16 X 1 1/4 HEX BOLTS
- 6-7/16 LOCK NUTS

INSTALLING THE MOUNTING BRACKETS

Remove the inside bolt from the tow hook (and bolt beside it) from the splash pan. Set mount brackets in place and replace bolts semi loose, as you might have to move the bracket around to align front bar. Note: The mount bracket has a spare hole that could be used for extra support.

INSTALLING THE FRONT BAR

Line up the three holes on the lower portion of the front bar with the holes on the mount brackets outer edge. Using 7/16 hardware and washers fasten bar to the mounting brackets. After the front bar is attached to the mounting brackets, align the bar to the bumper. Once satisfied with alignment tighten all bolts securely.

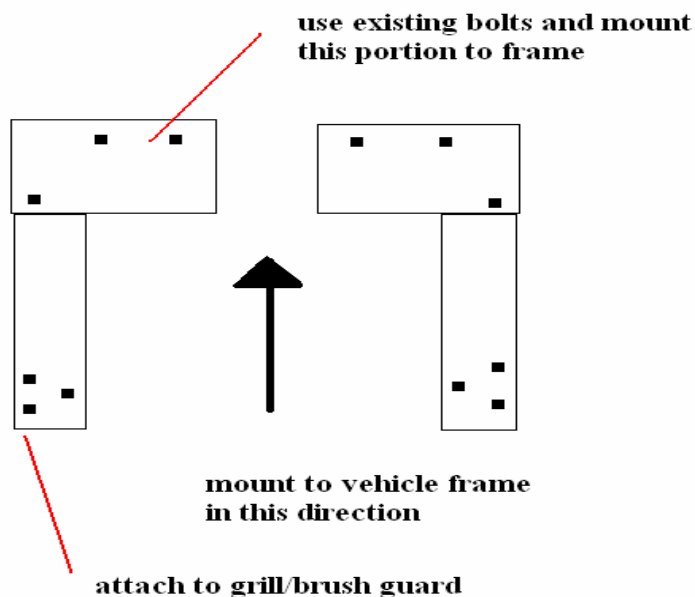

INSTALLING THE SUPPORT BRACKET

Remove the license plate bracket screws, but do not discard screws, as they will be required for installation. Using the screws that held the license plate bracket and the $\frac{1}{4}$ screws provided attach the support bracket (between the bumper and license plate bracket as show below). Tighten all fasteners.

support bracket

